

ÖVE R37 Configuration

Mandatory configuration in Austria

To comply with Austrian regulations, two parameters must be set:

- **Delay start**
- **Undervoltage protection**

- When the app connects to a charger that supports ÖVE R37 settings, a new tab titled 'Country Specific Settings' will appear. After the user selects 'Austria' as the country, the features above will be automatically configured with their default values. If other countries are selected, this page will display 'Unsupported location'.
- 'Delay start' will be displayed as 60s (default value), adjustable between 0-300s.
- 'Undervoltage protection' will be displayed as '0.80 pu, stop charging within 10 seconds' (default value), and can be manually changed to '0.80 pu, stop charging within 12 seconds'.

